


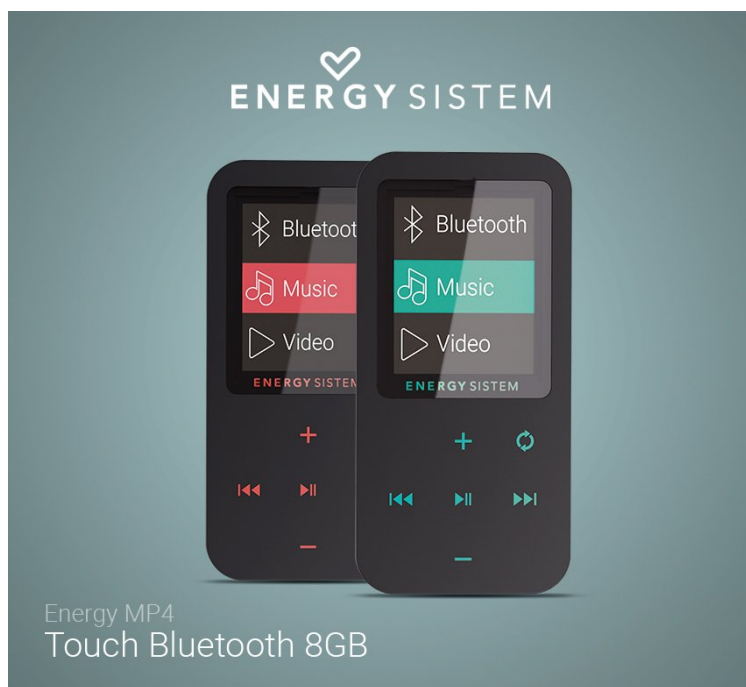

(<https://camo.githubusercontent.com/a8b9c41832b585d80fdda3baf6bc02969d02f01f>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634352f35373966

Introduction

Thank you for your trust in us and for buying your new Energy MP4 Touch Bluetooth. We hope you enjoy it.

MP4 player with Bluetooth technology and built-in FM radio to listen to your music wirelessly.

Care and maintenance

Do not expose your Energy MP4 to impacts, dust, direct sunlight, moisture or high temperatures.

Do not use corrosive nor abrasive cleaning products.

Keep the device clean and free of dust using a soft and dry cloth.

Charge the battery when the display shows the low battery icon.

Do not disassemble the device. All repairs should be exclusively done by qualified staff of Energy Sistem Technology, S.A.

Main features

- 128x32 pixels screen.
- Built-in FM radio with preset stations and recording function.
- Digital voice recorder with built-in microphone.
- MP3 / FLAC / WMA / WAV music playback
- 7 EQ modes: Normal, Rock, Pop, Classic, Soft, Jazz, DBB-Bass.
- 7 repeat and playback modes (including shuffle mode).
- Folder navigation.
- A-B repeat mode.
- Rechargeable lithium battery.
- Updatable firmware.


- No drivers needed.

Product content

- Energy MP4 Touch Bluetooth
- Hi-Fi in-ear earphones.
- USB cable to charge the battery and connect the device to the PC.
- Quick guide.

General overview

1. MENU
2. MICRO SD
3. MICROPHONE
4. ON/OFF
5. NEXT
6. VOLUME -
7. PLAY / PAUSE
8. BACK
9. VOLUME +
10. AUDIO OUTPUT
11. USB CONNECTION

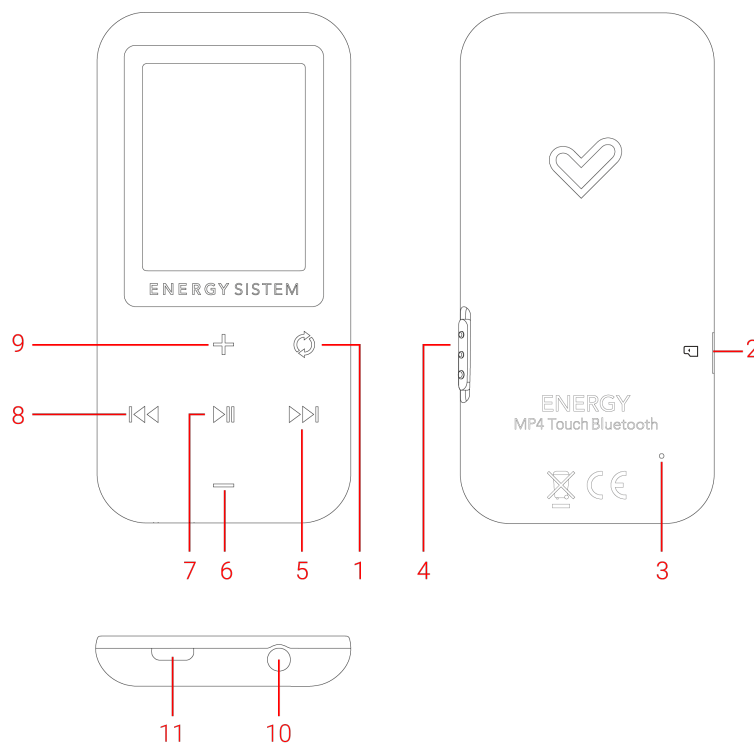

(<https://camo.githubusercontent.com/c41d386f9bab188ca4aed64179d58fb7ee6e1a62>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634352f35373966

Power on, power off and charging

Press and hold the On/Off switch (4) up for 2 seconds in order to turn your Energy MP4 Touch Bluetooth on and off. To lock/unlock the device, move the On/Off (4) switch down/up respectively.

Connect the micro-USB cable to the USB Connection (11) to charge the battery, then connect the other end to a computer or any other device with USB charging port.

When connecting your Energy MP4 to the PC or Tablet, you will be able to choose between the Charge

and play option in order to use the device while charging it; or the Charge and transfer option for file transfer.

Your Energy MP4 has an integrated rechargeable Li-Ion battery. Charge the battery fully before first use in order to optimize the battery life. Charge the battery by connecting the MP4 player to a computer via the USB connector.

The charging time varies between 2 to 3 hours, depending on whether the device is off or on. In order to maintain the battery in excellent condition, we recommend you to turn it off when charging it and not to charge it for more than 8 hours.


Access the SET->Display Settings option to disable automatic display backlight after some seconds of inactivity and optimize your Energy MP4 battery life. In order to activate again the display backlight, slide the On/Off (4) switch up briefly.

In order to optimize the battery lifespan, we recommend not to disable this power saving system.

Notice: We recommend you not to store or leave your device disused for a long period of time with the battery completely discharged.

Main menu

BLUETOOTH



(https://camo.githubusercontent.com/194742edca432dde6466a82a3e6bae39d48f0dc4

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634352f35373966

MUSIC MODE




(https://camo.githubusercontent.com

/35c42ddb7d654e98158554e7b160f9f9a519dd6d

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634352f35373966

VIDEO

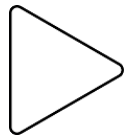

(https://camo.githubusercontent.com

/06b416ac97db79cc4ff2e9008ed1440ae50a3b5e

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634352f35373966

FM RADIO



(https://camo.githubusercontent.com

/640fc2f4a9ebd1080035ac53ccdc36e85fa097b7

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634352f35373966

VOICE MODE

(https://camo.githubusercontent.com/b3d3fd156951a1ca222a0996d2684a4a96eef890

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634352f35373966

PHOTO

(https://camo.githubusercontent.com

/4cdcb803e715047dcd9194e049ad09e58d91f23


/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634352f35373966

FOLDER VIEW

(https://camo.githubusercontent.com

/7a9a4309c457d18da718ac4e52e4321eaa1ad83a

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634352f35373966

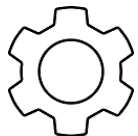SYSTEM SETTING

(https://camo.githubusercontent.com

/908e789a4a44d9cde7f8d9f4c49be1359edca2ed

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634352f35373966

Bluetooth connection

Access the Bluetooth menu and select the Bluetooth Status option in the submenu in order to enable the Bluetooth function. In this option, make sure the Bluetooth is on by choosing Enable Bluetooth.

To pair a Bluetooth device for the first time, select the Bluetooth Search option in the submenu. The device will perform a search and show a list of the devices found. This process may take a few minutes. Make sure your earphones or your Bluetooth speaker are also in synchronisation mode.

Once the device has been found, select it from the search list, then select the 'Bluetooth Pairing' option.

Notice: If once you have selected the device, you see the 'Bluetooth Unpairing' option, it means that it has been paired to your Energy MP4 before and it will be available in the 'Bluetooth Device List'.

Once the device has been paired, it will be saved in the memory and you will be able to connect it every time you use the BLUETOOTH mode of your Energy MP4 from the Bluetooth Devices List option in the submenu. By choosing the Bluetooth Devices Connected option you can reactivate the connection with the device on the list.

Notice: To perform a new device search, we should select the Bluetooth Unpairing option on the

Bluetooth Device List and repeat the operation by selecting the Bluetooth Search option from the submenu.

In order to listen to your music via Bluetooth connection, select the All songs option in the submenu. This will open the list of all songs stored in your MP4 player, either in your MP4 Touch internal memory or in the microSD external memory. You can select the file you prefer, just as you would do from your computer.

With Volume + (9) and Volume - (6) buttons you can select the previous/next folder or file. With the Play / Pause (7) button you will be able to access the selected folder or file.

To go back in the folder navigation menu, press MENU (1) briefly.

Select the Music option in the submenu to access the music playback menu, select the 'MUSIC' option in the main menu and press "Play/Pause".

Your Energy MP4 allows you to enjoy music in MP3 / FLAC / WMA / WAV formats thanks to its high-fidelity sound processor.

To start, pause or resume music playback press the Play / Pause button (7). Press briefly the Back (8) and Next (5) buttons to change to the previous/next track respectively.

You can access the playback setting submenu by pressing the MENU (1) button while the music playback is on or paused:

"Shuffle":

Songs are played in a random order. 'Shuffle' mode is disabled by default so you will have to enable it when using your Energy MP4 for the first time.

"Repeat":

You can choose your favourite mode through this option: "Repeat 1" (it repeats the current track) and "Repeat all" (it plays all tracks continuously) and "View Playing" (it plays the 10 first seconds and changes to the next track).

"Equalizer":

This option will allow you to equalize the audio according to your preferences. Among the 7 predefined modes are: "Off" (no adjustments will be made in the equalization of played music), "Rock", "Funk", "Hip Hop", "Jazz", "Classical" or "Techno".

Music Playback

Your Energy MP4 allows you to enjoy music in MP3 / FLAC / WMA / WAV formats thanks to its high-fidelity sound processor.

To access the music playback menu, select the Music option and press Play / Pause (7).

You will access directly the different music playback options. Move from one option to the next by using the Volume + (9) and Volume - (6) buttons and use the Play / Pause (7) button to select. Press MENU (1) briefly to go back or keep it pressed to return to the main menu.

"All Songs":

With this option you will see all songs stored in your Energy MP4 memory, sorted alphabetically by file name.

"Albums", "Artists" and "Genres": You will see the list of your favourite music sorted by album/ artist/ genre respectively.

Notice: In order to see audio files in those lists, the details concerning the artist, the album or the title must be registered in the file (these details are known as ID3-Tags). There are many free programs to create or modify the ID3-Tags such as "MP3 Tag" or "ID3 Renamer"

Notice: Song lyrics are text files named exactly after the music file but adding the LRC extension. If your songs do not contain this LRC file, lyrics will not be displayed, but you will be able to listen to the music without problems.

If the song contains the lyrics (LRC file), they will be displayed on screen, otherwise the Equalizer will be shown instead.

"Playlists": This option will enable you to access a customized list of songs. There are 3 editable lists available to add songs: Playlist on the go [1], Playlist on the go [2] and Playlist on the go [3]. To add songs to the list, you must access the music playback mode (select 'All songs', by album, artist or genre or by browsing the internal memory or card). Select the song you would like to add to the playlist and press the Play / Pause button (7). At that moment, the song will be played automatically. You can access the playback settings submenu by pressing and holding the MENU (1) button for 2 seconds while the music playback is on or paused. Then, select the option Add to playlist to add the

current song to one of the playlists available.

"Create Playlist": Use this option when you store or delete songs to create again playlists by album, artist or genre.

"Local folder":

This option allows you to browse the folders of your MP4 Touch internal memory or microSD external memory and select the music file you prefer, just like you would do it from your computer.

To start music playback, access the file you would like to be played by selecting any of the options mentioned above: 'All songs', 'album', 'artist', 'genre' or by browsing the internal or card memory.

To start, pause or resume music playback press the Play / Pause button (7).

Press briefly the Back (8) and Next (5) buttons to change to the previous/next track respectively. You can also rewind / fast-forward the song by pressing and holding the Back (8) / Next (5) buttons respectively.

You can access the playback settings submenu by pressing and holding the MENU (1) button for 2 seconds while the music playback is on or paused:

"Play mode":

1) Repeat:

You can choose your favourite mode through this option: "Repeat 1" (it repeats the current track) and "Repeat all" (it plays all tracks continuously) and "View Playing" (it plays the 10 first seconds and changes to next track).

2) Shuffle:

Songs are played in a random order. 'Shuffle' mode is disabled by default so you will have to enable it when using your Energy MP4 for the first time.

"Sound settings":

1) Equalizer:

This option will allow you to equalize the audio according to your preferences. Among the 7 predefined modes are: "Off" (any adjustment will be made in the equalization of played music), "Rock", "Funk", "Hip Hop", "Jazz", "Classic" or "Techno".

2) Variable Speed Playback:

This option allows you to increase or decrease the playback speed. In case you don't want to change the song speed, select the '+0' option in this submenu.

"Add to playlist": This option allows you to add one of the songs stored in your internal memory to a list. There are 3 editable lists available to add songs: Playlist on the go [1], Playlist on the go [2] and Playlist on the go [3]. Select this option to add the current song to one of the three playlists available.

"Remove from playlist": Select this option to remove the current song from the playlist.

"Delete": This option allows you to delete the current song from the internal memory.

Folder navigation

This function allows you to directly choose the folder and the music / video / image file you would like to play, previously sorted on your PC.

You can browse your folders in Music / Video / Photo mode.

Please keep in mind that while you are browsing the folders in a specific section, only the file types associated to that section will be displayed (music files with Music, image files with Photo, etc.).

In order to see all the files stored in the internal memory at the same time, choose the Folders option in the main menu.

With the Volume + (9) and Volume - (6) buttons you can select the previous/next folder or file. With the Play / Pause (7) button you will be able to access the selected folder or file.

To go back in the folder navigation menu, press MENU (1) briefly, or press it and hold it to return to the main menu.

Radio mode

Your MP4 Touch has an integrated FM Radio with some presets and direct recording option. To listen to the radio, select the FM Radio option in the main menu.

Move from one option to the next by using the Volume + (9) and Volume - (6) buttons and use the Play / Pause (7) button to select. Press and hold the MENU (1) button to return to the main menu.

In order to create a first list of presets, you should use one of the available search options from the menu: manual or automatic.

Notice: Make sure your earphones are properly connected to the audio output. Otherwise, the FM search won't be performed correctly.

Presets: Through this option, you will access the list of presets previously saved in the MP4 memory. A list of up to 30 presets is available. When using your MP4 Touch for the first time, any preset will be saved.

Manual tune: You will access directly the frequencies browser. With the Next (5) / Back (8) buttons you can browse the frequencies range. By pressing these buttons you will move one step forward or backward and by pressing and holding the button, you will start the auto search. Use the Volume + (9) and Volume - (6) buttons to turn the volume up or down respectively and press the Play / Pause (7) button to select the preset saved in the favourites list.

Auto tune: It scans the frequencies range and saves the first 30 stations found in the presets.

FM Recording: This option enables you to access the audio files you have recorded with the FM recording option (check information below). To listen to these files, access the corresponding folder (previously stored in the internal or external memory) in the main menu. If you are in Folder mode, select the RECORDINGS folder by using the folder navigation function, select the 'FMRECXXX' file you would like to listen to and press Play / Pause (7) Exit the Recording mode by keeping the MENU (1) button pressed.

Once you have a list of saved stations and with the FM dial window open, keep the MENU (1) button pressed and access the radio settings submenu to see the different options available.

Start FM radio recording: You can record the FM radio broadcast on WAV audio files. Select this option with the Play / Pause (7) button to start recording. You can pause the recording by pressing briefly Play / Pause (7) and resume it later by pressing again Play / Pause (7). To finish the recording, press the MENU (1) button.

Save to preset: This option allows you to save the current station in the next preset you choose in the stations menu. The current station will be saved in the internal memory of the device. If it is the first one you save, it will be stored as "01". Repeat this process to list up to 30 stations in the order you prefer.

Clear preset: This option allows you to remove the current preset from the preset stations list.

Auto tune: It scans the frequency range and stores the first 30 stations found in the presets.

Press the MENU (1) button to return to the MP4 player main menu. Once in the main menu, the FM radio reception will finish.

Voice recorder

Your MP4 Touch enables you to perform voice recording thanks to its integrated microphone. To access the voice recording mode, select the Recordings option from the main Menu with the Play / Pause (7)* button.

Start voice recording: You will access directly the recording settings menu. Select this option to start recording. You can pause the recording by pressing briefly Play / Pause (7). To finish the recording and save it in the MP4 memory, press the MENU (1) button.

Recordings library: The audio files you have recorded will be stored in the MP4 Touch internal or external memory (depending on what you have selected previously in the 'Storage' option in the same settings menu). Using the folder navigation function, select the 'RECXXX' file you would like to listen to and press Play / Pause (7).

In order to delete the recording file selected, keep pressed the MENU (1) button for 2 seconds.

To return to the previous menu, press MENU (1) briefly.

Storage: Choose your storage preference for your voice recordings: internal or external memory.

Record Format: Choose recording format: 'MP3', 'WAV' or 'ACT'.

Image viewing

View and enjoy your BMP / JPG / GIF images and photos thanks to the TFT high-resolution screen of your MP4 Touch.

To view your images, select Photo from the main menu. You will access directly to the file explorer (check the 'Folder navigation' section), then choose the picture you prefer with the Volume + (9) and Volume - (6) buttons and press Play / Pause (7) button to view it.

Press briefly the Back (8) and Next (5), buttons to change to the previous/next image respectively. Access the options submenu by pressing the MENU (1) button for a few seconds.

The ~~Slideshow settings~~ option from the submenu allows you to set the playback mode: Shuffle, repeat and thumbnail. You can also set the time per slide if you have selected the repeat option.

To return to the previous menu, press MENU (1).

Select 'Create Playlist': Use this option when you store or delete images to create again playlists in the internal or external memory.

Video player

Your MP4 Touch makes music grow to a new level since you can enjoy your favourite music videos at any time and in any place.

You can play AVI/WMV/MPG/VOB/ASF videos previously converted to the AMV format with the AMV video Converter software, which is included in the MP4 player memory. Check the user manual AMV VIDEO CONVERTER section.

To play videos, select the Video option in the main menu.

You will access directly the file explorer (check the 'Folder navigation' section), then choose the video you prefer from the internal or external memory by using the Volume + (9) and Volume - (6) buttons and press Play / Pause (7) button to view it.

Press briefly the Back (8) and Next (5) buttons to change to the previous/next video respectively. You can also rewind/fast-forward the current playback by pressing and holding the Back (8) and Next (5) buttons respectively.

Access the options submenu by pressing the MENU (1) button for a few seconds. Move from one option to the next by using the Volume + (9) and Volume - (6) buttons and use the Play / Pause (7) button to select.

Repeat: This option enables you to set the playback order of videos (Repeat 1, Repeat all).

~~Delete video:~~ This option allows you to delete the current video.

Select 'Create Playlist': Use this option when you store or delete images to create again playlists in the internal or external memory.

To return to the video you were watching, press briefly the MENU (1) button.

Video converter: Installation

The easy AMV Video Converter software will allow you to convert your AVI/WMV/MPG/VOB/ASF videos to the AMV format and enjoy them in your MP4 Touch.

To install AMV Video Converter follow the steps below:

1. Connect your Energy MP4 to your computer.
2. Access the MP4 player memory and run the "Setup.exe" installation file directly from the "AMV Video Converter" folder.
3. On the installation window, select "OK" and click on the icon to begin the installation. Press "Next" to follow the installation steps. Notice: Depending on the video codecs you have installed in your computer, the program may alert you when trying to overwrite the files. In that case, we

recommend to select "yes" in order to keep the existing files in the computer.
 4. Once the installation is complete, you can run the application from "Start"->"All programs"->"Media Player Utilities"->"AMV&AVI Video Converter".

Video converter: creating AVI videos

Follow the steps below to convert an AVI/WMV/MPG/VOB/ASF video:

Notice: In order to convert special video formats like MPEG4 / DivX / XviD / etc. make sure that you have the necessary "codecs" installed in your computer.

You can install codec packages like "K-Lite Standard Pack".

1.Run "AMV&AVI Video Converter" from the "Start" menu.

2.Choose the file to be converted with the "Add file" button.



([https://camo.githubusercontent.com/e8924857d699968120ae328310b737e0dabbb502](https://camo.githubusercontent.com/e8924857d699968120ae328310b737e0dabbb502/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634342f35376632)

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634342f35376632

3.Select the destination folder for the newly created video by clicking on the

"Video Path" button.  ([https://camo.githubusercontent.com](https://camo.githubusercontent.com/4c211a4e816990f25441e148b52beac16ba0c944/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634342f35376632)

/4c211a4e816990f25441e148b52beac16ba0c944

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634342f35376632

Notice: If your Energy MP4 is connected to your computer, you can select a folder to store the new video directly into it, but first make sure that it has enough free memory available.

4.Click on the "Add file" button to add another video to the conversion queue.



([https://camo.githubusercontent.com/e8924857d699968120ae328310b737e0dabbb502](https://camo.githubusercontent.com/e8924857d699968120ae328310b737e0dabbb502/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634342f35376632)

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634342f35376632

Notice: You can add many conversion tasks to convert automatically several videos without having to keep an eye on your computer. You can also delete a queued task by selecting the line with the mouse, clicking with the right button and pressing "Delete".

5.Repeat steps 2 to 4 for each video you would like to convert.

6.Once you have queued all the videos you want to convert, press "Begin" to start the process.




([https://camo.githubusercontent.com/f777f8a120b4634b9a9b120c79046706f0a6f0cb](https://camo.githubusercontent.com/f777f8a120b4634b9a9b120c79046706f0a6f0cb/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634342f35376632)

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634342f35376632

7.In the "Status" column you can see the file that is currently being converted. You can see the state of conversion of a given task on the "Progress" bar. Wait until all the queued tasks are finished and click on the "Close" button to exit the program.

Notice: It is advisable not to use the computer while Video Converter is working since it requires a good amount of resources and it could cause the application to stop responding.

8.Connect your MP4 Touch to your computer (check "PC CONNECTION" section) and copy the new AMV files to the folder of your choice, unless you have previously chosen the new videos to be directly stored in a specific folder.

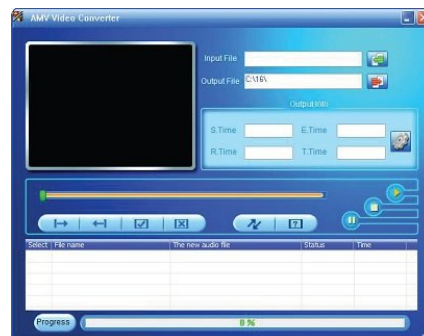

([https://camo.githubusercontent.com](https://camo.githubusercontent.com/6adef3f605783787dcf925ba15923a45e9b53cb3/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634342f35376632)

/6adef3f605783787dcf925ba15923a45e9b53cb3

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f34323634342f35376632

Settings

You can configure many aspects of your MP4 'Touch' very easily.

To do that, access **System setting** from the main menu. Move from one option to the next by using the Volume + (9) and Volume - (6) buttons and use the Play / Pause (7) button to select.

Sound settings: This option enables you to set the volume limit of your MP4 Touch audio output.

Sleep timer: This option allows you to set the time for the MP4 player to sleep, whether it is in playback mode or not. Choose '0' minutes if you don't want to enable sleep timer on your MP4 Touch.

Backlight timer: You will be able to adjust the time that it takes for the display to turn off automatically when no buttons are pressed. Choose the 'Always on' option for the display to be always on.

Interface Style: You can change the device interface. 'Red', 'Grey' or 'Green' versions are available.

Language: You can switch the user interface language to Spanish, English, French, etc.

PC Connection

In order to enjoy the best sound and your favourite music on your Energy MP4, you have to copy these files from your PC to its internal memory first.

Connect the MP4 player to your computer USB port through the USB connector and it will be automatically detected by your computer without installing any driver.

Once it is detected, you will be able to read/write on the device memory, just as if it was a regular drive.

Once the data transfer is finished, disconnect the MP4 player from the computer.

IMPORTANT: To prevent data loss, remove the USB device safely before disconnecting the MP4 player. In Windows XP, for instance, the safely remove hardware icon is on the start taskbar, near the clock.

Firmware reinstallation

Your Energy MP4 has an operating system installed, commonly known as firmware, that sometimes needs to be reinstalled. If you find that the MP4 player is not responding, reboots randomly, or you have problems to access the memory content from your computer, try to press RESET by using a pin or a needle. If the problem persists, it will be a sign that the firmware has been damaged and needs to be reinstalled.

In order to reinstall the firmware, access manually www.energysistem.com (<http://www.energysistem.com>) from a web browser. Select your model in the product section and download the proper firmware version from the download area. Unzip the file in your computer and follow the instructions included in PDF format.

Warranty.

Energy Sistem Technolgy, SA is liable for any lack of conformity which exists at the time the goods were purchased during a period of 36 months.

Batteries are excluded from the 36-month warranty, having a warranty period of 24 months.

This warranty covers any defects in workmanship or materials. This warranty doesn't cover any failure of the product due to accidents, misuse or alteration made by an unauthorized person.

The special 36-months warranty is valid for the European Union. For other countries, please refer to your specific legislation or your local distributor.

Warranty procedure.

1. Visit the Support section at <http://support.energysistem.com> (<http://support.energysistem.com>) and select your product to view the FAQ (Frequently Asked Questions), user manuals, drivers and updates available. The solution to your problem is very likely to have been already published there.
You can check the availability of the user manual in your language at <http://www.energysistem.com/es-es/support/manuals> (<http://www.energysistem.com/es-es/support/manuals>)

2. Alternatively, you may prefer to contact the distributor from which you purchased the product, presenting the purchase receipt or invoice.
Important: This warranty doesn't cover any damage or loss to any data stored in the product memory, therefore Energy Sistem's Technical Service will not assume any loss of the above mentioned information so it is recommended to make a backup of your data and to remove any data or personal info from its internal memory before you send the product, or to send it only with the original factory default values.

Specifications are subject to change without notice.

Trademarks. All companies, brands and product names are trademarks or registered trademarks of their respective companies.

© 2015 by Energy Sistem Technology, S.A. All rights reserved.

Declaration of conformity.

Manufacturer name: Energy Sistem Technolgy, S.A.

Address: Pol. Ind. Finestrat, C/.Calpe, 1 - 03509, Finestrat, Alicante (Spain)

Tel: 902 388 388 F ax: 902 119 034 N IF: A53107488

We declare under our own exclusive responsibility that the product:

Energy Sistem(TM) Energy MP4 Touch Series

Manufacturing country: China

Is in compliance with the essential norms and standards of the Directive 2004/108/EC of the European Parliament and of the Council of December 15th 2004.

EN 55022:2010+AC: 2011

EN 55024:2010+A1: 2015

EN60950-1 :2006+A 11 :2009

+A 1 :201 O+A 12:2011 +A2 :2013

EN 62479 :2010

EN 301 489-1 V1 .9.2: 2011-09

EN 301 489-17 V2.2.1: 2012-09

EN 300 328 V1 .9.1: 2015-02



(<https://camo.githubusercontent.com/2c3928d2090780445e4c86bccf1fd523a25499d1>

/687474703a2f2f7374617469632e656e6572677973697374656d2e636f6d2f696d616765732f6d616e75616c732f33393035322f35343838